Polaroid

# PhotoKeeper
# User's Manual

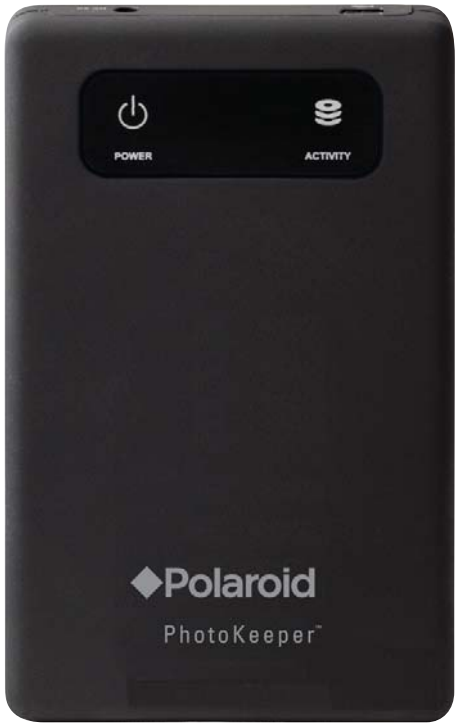


**Questions?**
**Need some help?**

This manual should help you understand your new product.

**If you still have questions, call our help line found on the insert with this icon:**

**Or visit www.polaroid.com/support.**

20080404

# Table of Contents

CONGRATULATIONS on your purchase of a Polaroid PhotoKeeper™. Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage to the device. Also remember to keep this User's Manual in a convenient location for future reference.

**Important:** Save the original box and all packing material for future shipping needs.

## Table of Contents


**Getting Started** ..... **3**
- Main Features ..... 3
- Package contents ..... 3
- System requirements ..... 3
- PhotoKeeper™ Specifications ..... 3

**How to make a backup of your photos** ..... **4**
- Overview ..... 4
- Backing up your photos with PhotoKeeper™ ..... 4

**Restoring (copying) photos** ..... **8**
- Overview ..... 8
- Restoring (copying) images to a computer PhotoKeeper™ currently holds a backup ..... 8
- Moving images from PhotoKeeper™ to another computer OR restoring (copying) to the same computer with a reinstalled operating system ..... 10

**Configuration options** ..... **12**
- Overview ..... 12
- Change the drives and folders PhotoKeeper™ will search for photos in: ..... 12
- To have PhotoKeeper™ automatically search your entire computer: ..... 13
- To have PhotoKeeper™ search only selected folders: ..... 13
- Change file types and file sizes that PhotoKeeper™ will back up: ..... 13
- Change the way PhotoKeeper™ handles files found in e-mails and Zip files: ..... 14

**Advanced configuration options** ..... **15**
- Overview ..... 15
- Viewer: ..... 15
- Reset: ..... 15
- Statistics: ..... 16

**Working with your photos** ..... **17**
- Overview: ..... 17
- To print your photos on your home printer: ..... 18
- To attach your photos to an e-mail (Microsoft Outlook and Outlook Express only): ..... 18
- To set a photo as your desktop wallpaper: ..... 18
- To burn your photos to a CD: ..... 18
- To delete photos from PhotoKeeper™: ..... 18

**Troubleshooting** ..... **20**

**Frequently asked questions** ..... **21**

**Recycling and copyright information** ..... **22**

## Getting Started

### *Main Features*

- ClickFree™ Back up technology
  - Automatically runs when plugged into the computer via USB port.
  - Automatic searches for photos in all connected drives, email and zip files.
  - Automatic stores all your photos and still camera videos in the same files as copied from your computer.
- View photo screen
  - Conveniently view all your photos in thumbnail and expanded size.
- Stores a lifetime of memories:
  - Storage capacity for up to 80,000 photos

### *Package contents*

Check to ensure the following components are included:

- PhotoKeeper™
- USB cable (Type A to mini-B)
- AC power adapter
- Slipcase
- Quick Start guide
- End-User License Agreement (EULA)

### *System requirements*

- A computer running Microsoft Windows XP (Home, Professional, Media Center Edition), Vista or Windows 2000 with SP4 (some features are not supported)
- One available USB port

### *PhotoKeeper™ Specifications*

- Unit:
  - Dimensions: 5” x 3” x 5/8”
  - Weight: 5 oz
  - Hard drive: 80G
- 5V AC adapter
  - Nominal Capacity:
  - Nominal Voltage
  - Operating Temperature
  - Weight: 2.5 oz
- USB cable
  - Type A to mini-B

# How To Make a Backup of Your Photos

## *Overview*

PhotoKeeper™ is an easy-to-use digital photo backup appliance. No hardware configuration or software installation is required. The backup procedure begins once the device has been attached to your computer using the supplied USB cable and power supply. The device automatically searches for and backs up digital photos stored on your computer, including those stored in selected e-mail programs and Zip files

## *Backing up your photos with PhotoKeeper™*

1. **Turn on your computer.** Make sure that your computer has completed starting up before proceeding to Step 2. If your computer is set up with user accounts, select your user name and enter your password before continuing to Step 2.

   **Note:**
   - Depending on the speed and configuration of your computer, the startup process may take up to several minutes.
   - The PhotoKeeper™ will not automatically start up if it is connected to your computer before it has completely started up.

2. **Plug in power adapter.** Connect the included 5V power adapter to both PhotoKeeper™ and the wall outlet. Continue to Step 3. The power indicator on your PhotoKeeper™ will glow.

   **Note:**
   - The included USB cable will likely provide power to PhotoKeeper™ without the use of the AC power adapter. However, depending on your computer system you may need to use the included AC power adapter.

3. **Connect PhotoKeeper™ to your computer's USB port**. Connect the included USB cable to both PhotoKeeper™ and your computer's USB port.

   PhotoKeeper™ supports USB 2.0.

4. **Countdown screen**

   **For Windows 2000/XP/Vista:**
   **The Countdown screen will automatically appear on your computer.** Once the **Countdown** screen appears on your computer, the backup countdown timer will begin. When the countdown timer reaches zero, the backup will automatically start. There may be a slight delay between connecting PhotoKeeper™ and when the **Countdown** screen appears.

# How To Make a Backup of Your Photos

**For Windows Vista:**
The AutoPlay window will appear.

Select the **Always do this for software and games** checkbox. Click on **Run StarterPhotoKeeper.exe**.

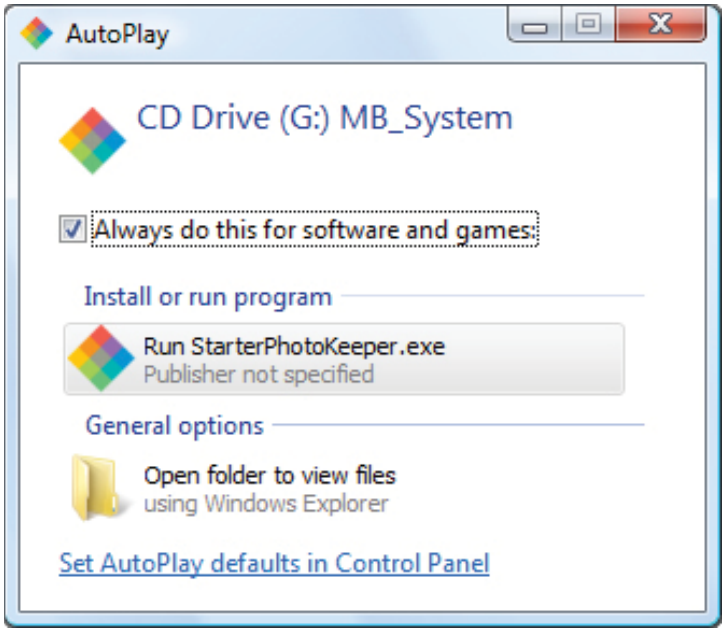


**The Countdown screen will automatically appear on your computer.** Once the **Countdown** screen appears on your computer, the backup countdown timer will begin. When the countdown timer reaches zero, the backup will automatically start. There may be a slight delay between connecting PhotoKeeper™ and when the **Countdown** screen appears.

# How To Make a Backup of Your Photos

Note:

- To start backing up immediately, click on the **Start Now** button.
- To change the back up configuration or access other utilities, click on the **Setup Options** button.
- If the **Countdown** screen does not appear within one minute of connecting it to your computer, please refer to the **Troubleshooting** section of this manual.

5. **Back up will begin on its own.** PhotoKeeper™ will automatically search for and backup all your digital photos. The amount of time required to complete this process will depend on your computer's configuration and number of photos on your computer.

Polaroid
Searching For Photos
E:\My Vacation\At the beach.jpg
Please wait while we backup your photos. Please note that the first backup usually takes longer than subsequent backups.
Cancel

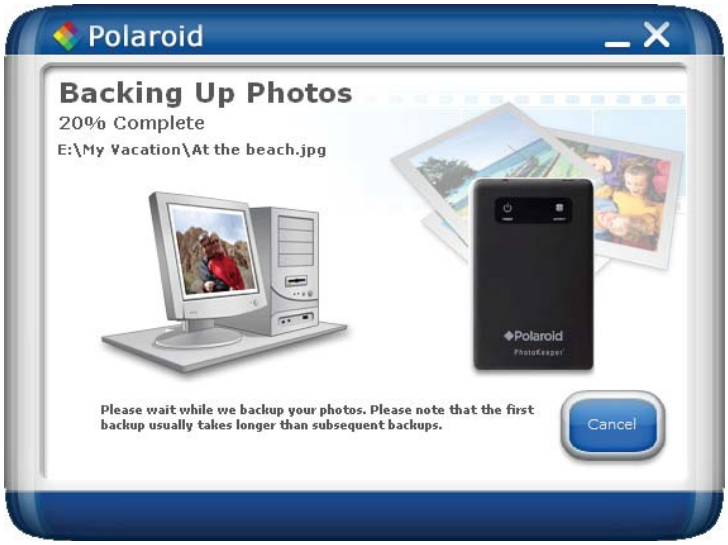
Polaroid
Backing Up Photos
20% Complete
E:\My Vacation\At the beach.jpg
Please wait while we backup your photos. Please note that the first backup usually takes longer than subsequent backups.
Cancel

6. **When backup completes, you're done!** Disconnect the USB Cable and unplug the supplied 5V AC adapter from PhotoKeeper™ and wall outlet. Store your PhotoKeeper™ in a safe place.

# How To Make a Backup of Your Photos

# Restoring (Copying) Photos

## *Overview*

The restore (copy) function allows you to restore photos backed up on your PhotoKeeper™ to your computer. Restoring photos will not delete them from PhotoKeeper™.

When restoring your photos, there are two possible scenarios:

1. You are restoring to the same computer PhotoKeeper™ currently holds a backup for.
2. You are restoring to a computer other than the one PhotoKeeper™ holds a backup for OR you are restoring to the same computer with a reinstalled operating system.

In addition, when choosing to restore your photos, you have the option to:

- Restore all of your photos
- Restore only some of your photos

## *When restoring (copying) images to a computer PhotoKeeper™ currently holds a backup for*

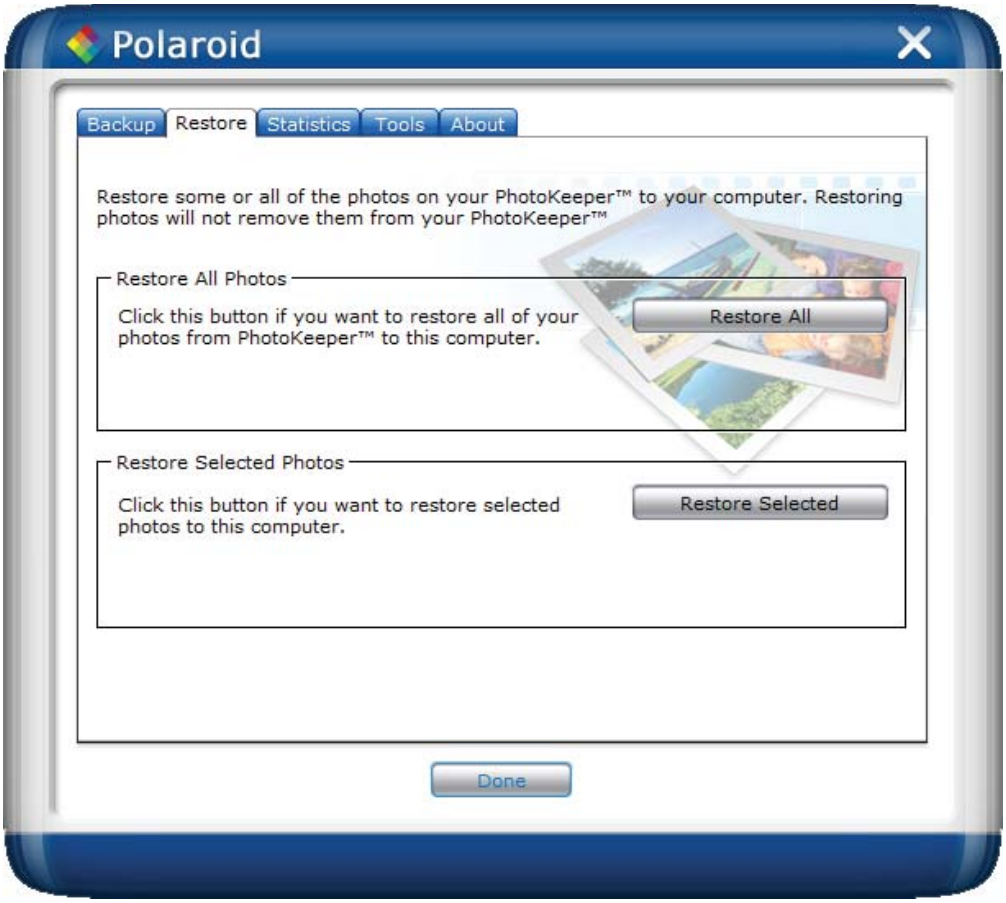
Polaroid
Backup
Restore
Statistics
Tools
About
Restore some or all of the photos on your PhotoKeeper™ to your computer. Restoring photos will not remove them from your PhotoKeeper™
Restore All Photos
Click this button if you want to restore all of your photos from PhotoKeeper™ to this computer.
Restore All
Restore Selected Photos
Click this button if you want to restore selected photos to this computer.
Restore Selected
Done

To restore selected photos only:

1. Connect PhotoKeeper™ to your computer. Click on the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Restore** tab.
3. Click on the **Restore Selected** button. This will bring up the **Restore Selected** window.

# Restoring (Copying) Photos

4. Select the files you want to restore. To select a file, select the box next to the file you want to restore. To select an entire folder, select the box next to the folder. Selecting a folder will select all of the contents of the folder, including subfolders.
5. To change the drive that your photos will be restored to, click on the drive letter from the drive box.
   **Note:** The drive you select must have enough space to hold your selected photos.

6. Click the **Start Restore** button to restore your photos. PhotoKeeper™ will begin to restore your photos. Depending on the number of photos being restored and speed of your computer, the restore process may take several minutes.

To restore all of your photos:

1. Connect PhotoKeeper™ to your computer. Click on the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Restore** tab.
3. Click on the **Restore All** button. This will bring up the **Restore All** window.
4. To change the drive that your photos will be restored to, click on the drive letter from the drive box.
   **Note:** The drive you select must have enough space to hold all of your photos.

5. Click the **Start Restore** button to restore all of your photos. PhotoKeeper™ will begin to restore your photos. Depending on the number of photos being restored and speed of your computer, the restore process may take several minutes.

# Restoring (Copying) Photos

***When moving images from PhotoKeeper™ to another computer OR restoring (copying) to the same computer with a reinstalled operating system***

Polaroid
New Computer
PhotoKeeper™ has detected that it has been connected to a computer other than the one it currently holds a back up for. PhotoKeeper™ can only hold a backup for one computer at a time.
What would you like to do?
View my photos
Copy photos to this computer
Reset PhotoKeeper™
Quit

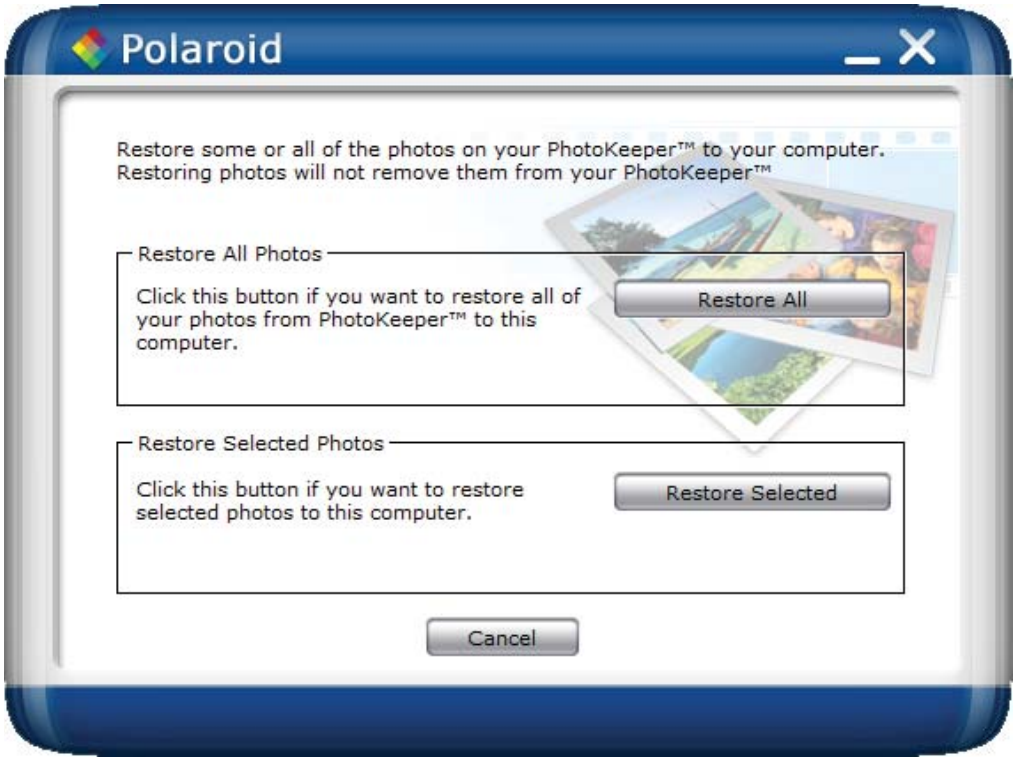
Polaroid
Restore some or all of the photos on your PhotoKeeper™ to your computer.
Restoring photos will not remove them from your PhotoKeeper™
Restore All Photos
Click this button if you want to restore all of your photos from PhotoKeeper™ to this computer.
Restore All
Restore Selected Photos
Click this button if you want to restore selected photos to this computer.
Restore Selected
Cancel

# Restoring (Copying) Photos

To restore all photos:

1. Connect PhotoKeeper™ to your computer. When the **New Computer** screen appears, click on the **Restore Photos** button.
2. Click on the **Restore All** button. This will bring up the **Restore All** window.
3. To change the drive that your photos will be restored to, click on the drive letter from the drive box.
   **Note:** The drive you select must have enough space to hold all of your photos.

4. Click the **Start Restore** button to restore all of your photos. PhotoKeeper™ will begin to restore your photos. Depending on the number of photos being restored and speed of your computer, the restore process may take several minutes. Backup configuration options

To restore selected photos only:

1. Connect PhotoKeeper™ to your computer. When the **New Computer** screen appears, click on the "**Copy photo to this computer"** link.
2. Click on the **Restore Selected** button. This will bring up the **Restore Selected** window.
3. Select the files you want to restore. To select a file, select the box next to the file you want to restore. To select an entire folder, select the box next to the folder. Selecting a folder will select all of the contents of the folder, including subfolders. To change the drive that your photos will be restored to, click on the drive letter from the drive box.
   **Note:** The drive you select must have enough space to hold all of your photos.

4. Click **Start Restore** to restore your photos. PhotoKeeper™ will begin to restore your photos. Depending on the number of photos being restored and the speed of your computer, the restore process may take several minutes.

# Configuration Options

## *Overview*

PhotoKeeper™ is designed to automatically search for and back up all of your digital photos. In general, it does not require additional configuration or setup.

If, however, you would like to modify the way PhotoKeeper™ backs up your photos, you can do so by changing the backup options. This section discusses additional backup options.

The backup options will allow you to change the types, locations and sizes of the photos PhotoKeeper™ backs up. In addition, you can change how PhotoKeeper™ handles photos attached to e-mails and in Zip files. Changing the backup options affects the way PhotoKeeper™ backs up files and is recommended for advanced users only.

Note: PhotoKeeper™ will only back up photos that meet all criteria as specified in the backup options. For example, if both file size and file extension criteria have been set, a photo must meet both criteria in order to be backed up.

## *Change the drives and folders PhotoKeeper™ will search for photos:*

You can choose the locations on your computer where PhotoKeeper™ searches for photos. PhotoKeeper™ can either:

- automatically search your entire computer (default setting)
- only search selected folders

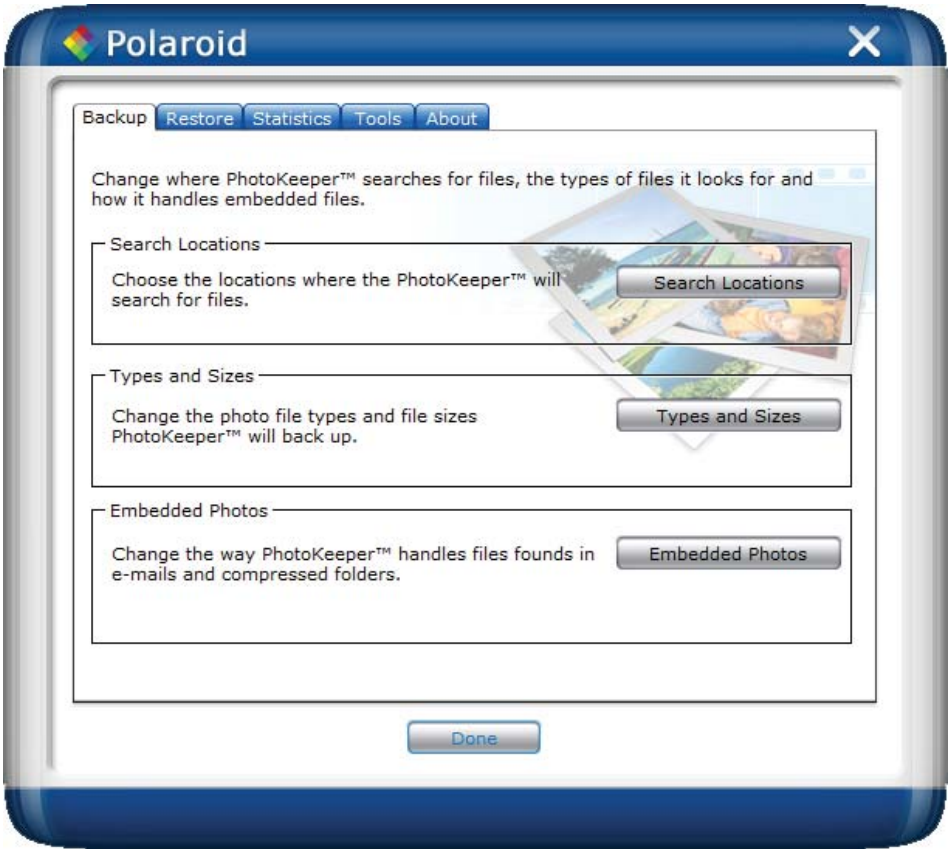
Polaroid
Backup
Restore
Statistics
Tools
About
Change where PhotoKeeper™ searches for files, the types of files it looks for and how it handles embedded files.
Search Locations
Choose the locations where the PhotoKeeper™ will search for files.
Search Locations
Types and Sizes
Change the photo file types and file sizes PhotoKeeper™ will back up.
Types and Sizes
Embedded Photos
Change the way PhotoKeeper™ handles files founds in e-mails and compressed folders.
Embedded Photos
Done

# Configuration Options

## *To have PhotoKeeper™ automatically search your entire computer:*

1. Connect PhotoKeeper™ to your computer. Click on the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Backup** tab.
3. Click on the **Search Locations** button.
4. Click the **Yes** button to change the Search Location options.
5. Select the **Search** entire computer option.
6. Select the boxes for each exclusion you wish to implement:
   - **Skip Windows Systems folders**: Selecting this box will tell PhotoKeeper™ to skip the Windows folder and all subfolders. The default setting is to skip the Windows folder (checked).
   - **Skip removable media and drives**: Checking this box will tell PhotoKeeper™ to skip all removable media drives and external drives. The default setting is to skip removable media and drives (checked).
7. Click the **Save** button. When PhotoKeeper™ starts its next backup, it will automatically search your entire computer, implementing exclusions that you have specified.

## *To have PhotoKeeper™ search only selected folders:*

1. Connect PhotoKeeper™ to your computer. Click the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Backup** tab.
3. Click on the **Search Locations** button.
4. Click the **Yes** button to change the Search Location options.
5. Select the **Search selected folders only** option.
6. Select the drives and folders that you want to back up. To select a drive or folder, select the box next to the drive or folder. Selecting a drive or folder will automatically select all of the contents of the folder, including subfolders. You must select at least one folder.
7. Click the **Save** button. When PhotoKeeper™ starts its next backup, it will only search folders that you have specified.

## *Change file types and file sizes that PhotoKeeper™ will back up:*

You can choose the types of files and the size parameters of files PhotoKeeper™ backs up.

To change the file types PhotoKeeper™ backs up:

1. Connect PhotoKeeper™ to your computer. Click on the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Backup** tab.
3. Click on the **Photo types and sizes** button.
4. Click the **Yes** button to change the file types and sizes options.
5. Check the boxes next to the file types that you want to back up. Use + and – to expand or collapse the tree. You must select at least one file type to back up.
6. Click the **Save** button. When PhotoKeeper™ starts its next backup, it will only back up the file types that you have specified.

To change the file sizes PhotoKeeper™ backs up:

1. Connect PhotoKeeper™ to your computer. Click on the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Backup** tab.
3. Click on the **Photo types and sizes** button.
4. Click the **Yes** button to change file types and sizes options.
5. Enter the size for the smallest file, in kilobytes (KB) PhotoKeeper™ will back up. To set no minimum (back up all files); enter '0' as the smallest file size.
6. Enter the size of the largest individual file, in megabytes (MB) PhotoKeeper™ will back up. The maximum individual file size PhotoKeeper™ can back up is 4,095 MB.
7. Click the **Save** button. PhotoKeeper™ will start its next backup, only backing up files that meet specified size criteria.

# Configuration Options

## *Change the way PhotoKeeper™ handles files in e-mails and Zip files:*

You can set the way PhotoKeeper™ handles photos found in e-mails and Zip files. PhotoKeeper™ supports Microsoft Outlook (97, 2000, XP, 2003 and 2007) and Microsoft Outlook Express 6.

To change the way PhotoKeeper™ handles files in e-mails and Zip files:

1. Connect PhotoKeeper™ to your computer. Click on the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Backup** tab.
3. Click on the **Embedded Photos** button.
4. Check the **Search for photos in compressed files** box if you want PhotoKeeper™ to back up files found within Zip files. Leaving this box unchecked will cause PhotoKeeper™ to skip Zip files, including those attached to e-mails. The default setting is to search for photos in compressed files (checked).
5. Check the **Search for photos in e-mail applications** box if you want PhotoKeeper™ to back up files attached to e-mail messages. The default setting is to search for photos in selected e-mail applications (checked).
6. Click the **Save** button. When PhotoKeeper™ starts its next backup, it will back up photos according to the criteria specified.

# Advanced Configuration Options

## *Overview*

PhotoKeeper™ also contains several advanced options and tools, such as a photo viewer, the ability to reset PhotoKeeper™, and general usage statistics.

## *Viewer:*

The Viewer allows you to view photos that are backed up on PhotoKeeper™. To view photos on PhotoKeeper™:

1. Connect PhotoKeeper™ to your computer. Click on the **View Photos** button before the countdown timer reaches zero.
2. Preview files by clicking on a specified folder from the folder tree. Use + or – to expand or collapse folders.

## *Reset:*

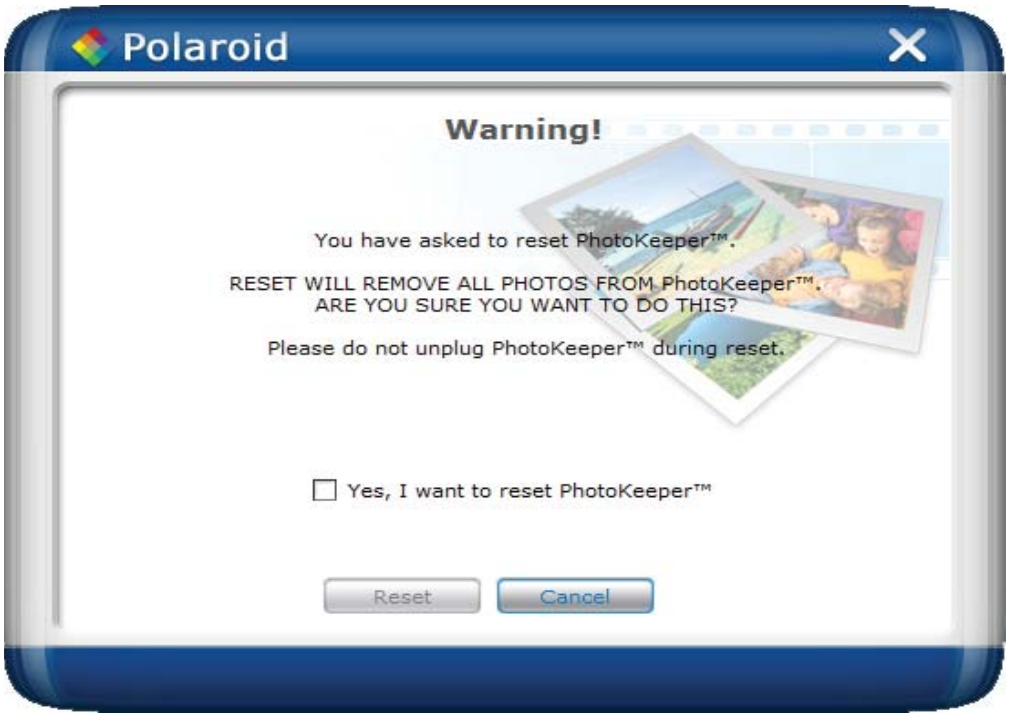
Polaroid
Warning!
You have asked to reset PhotoKeeper™.
RESET WILL REMOVE ALL PHOTOS FROM PhotoKeeper™.
ARE YOU SURE YOU WANT TO DO THIS?
Please do not unplug PhotoKeeper™ during reset.
Yes, I want to reset PhotoKeeper™
Reset
Cancel

The Reset tool allows you to reset PhotoKeeper™ for use with another computer (see Working with more than one computer).

PhotoKeeper™ is designed to backup a single computer at a time. If PhotoKeeper™ already holds a backup for a computer but you would like to use it to backup a different computer, you must first reset it.

Resetting will delete the photos and movies backed up on PhotoKeeper™ itself, but will not affect any photos on your computer. Before resetting PhotoKeeper™, ensure that you have a copy of your photos on your computer.

Note: If you reinstall your operating system on the computer PhotoKeeper™ holds a backup for, PhotoKeeper™ treats this reinstalled computer as a new computer. To back up photos on a computer with a reinstalled operating system, you must first reset PhotoKeeper™.

# Advanced Configuration Options

To reset PhotoKeeper™:

1. Connect PhotoKeeper™ to your computer. Click on the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Tools** tab.
3. Click on the **Reset** button.
4. To reset the PhotoKeeper™, check the **Yes, I want to reset Media Backup** box.

   **Note:** Resetting PhotoKeeper™ will delete the photos and movies backed up on PhotoKeeper™ itself. It will not affect any photos on your computer. Ensure that you have a copy of your photos on before resetting PhotoKeeper™.

5. Click the **Reset** button. PhotoKeeper™ will begin to reset itself. This procedure may take several minutes.
6. When the reset completes, click on the **OK** button. PhotoKeeper™ will automatically restart and prepare to back up your computer.

## *Statistics:*

Statistics will provide you with information about PhotoKeeper™'s usage and available space. To view the Statistics page:

1. Connect PhotoKeeper™ to your computer. Click on the **Setup Options** button before the countdown timer reaches zero.
2. Click on the **Statistics** tab.

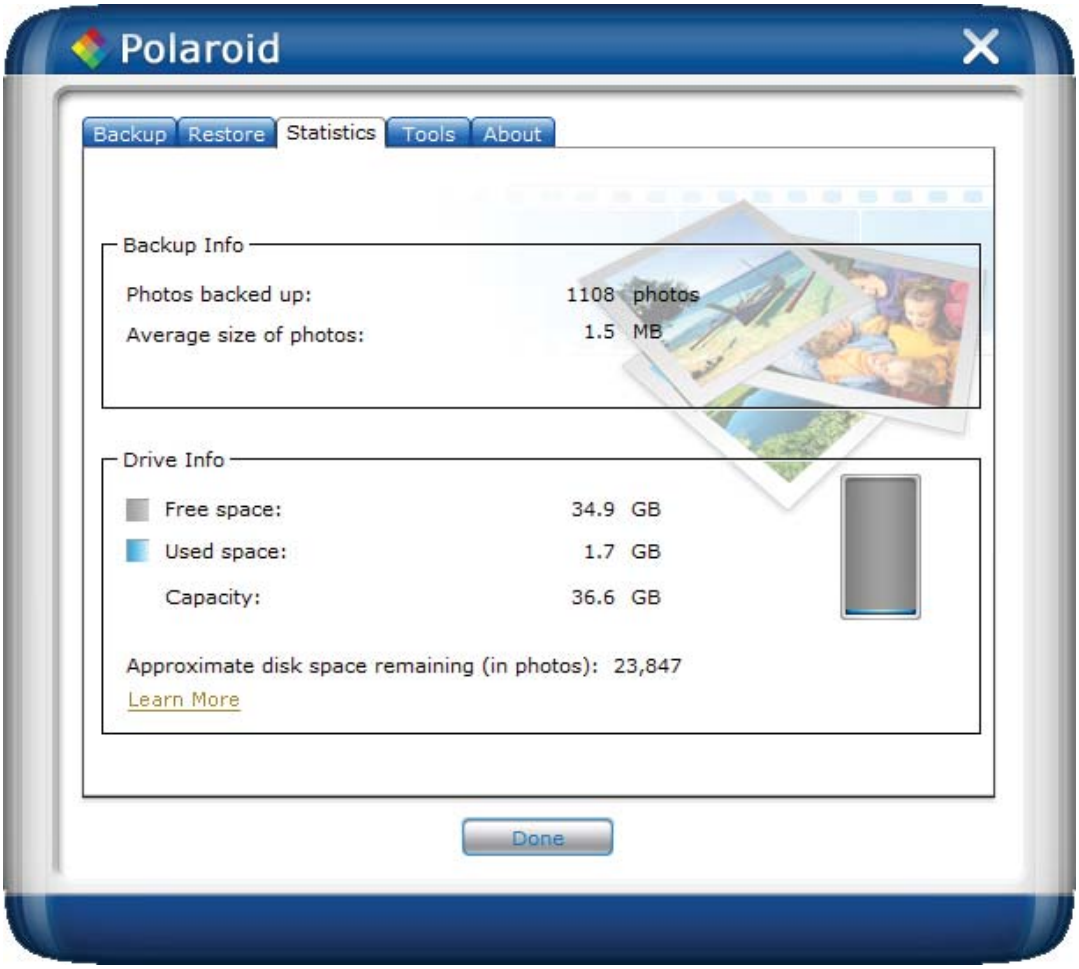

# Working with Your Photos

## *Overview:*

Once you have backed up your photos, you can use PhotoKeeper™ to:

- Print your photos on your home printer
- Attach your photos to an e-mail (for use with Microsoft Outlook and Outlook Express only)
- Use a photo as your desktop wallpaper
- Burn your photos to a CD
- Delete photos from PhotoKeeper™ (photos on the computer are not affected)

To use these features, you must have at least one backed up photo on PhotoKeeper™.

## *To print your photos on your home printer:*

**Note:** This feature is only supported under Windows XP and Vista.

1. Connect PhotoKeeper™ to your computer and let the backup complete. If you have already backed up photos onto PhotoKeeper™, you should click on the **View Images** button on the **Countdown** page.
2. Select the photos you want to print by clicking on the boxes next to each photo. If you wish to print all your images in a folder, click on the **More** button, then click on **Select All Images.** Click the **Clear Selection** button to clear all of the selections on the current page.
3. Click on the **Print** button. This will launch the Windows **Photo Printing Wizard**. Follow the on-screen instructions to print your photos.

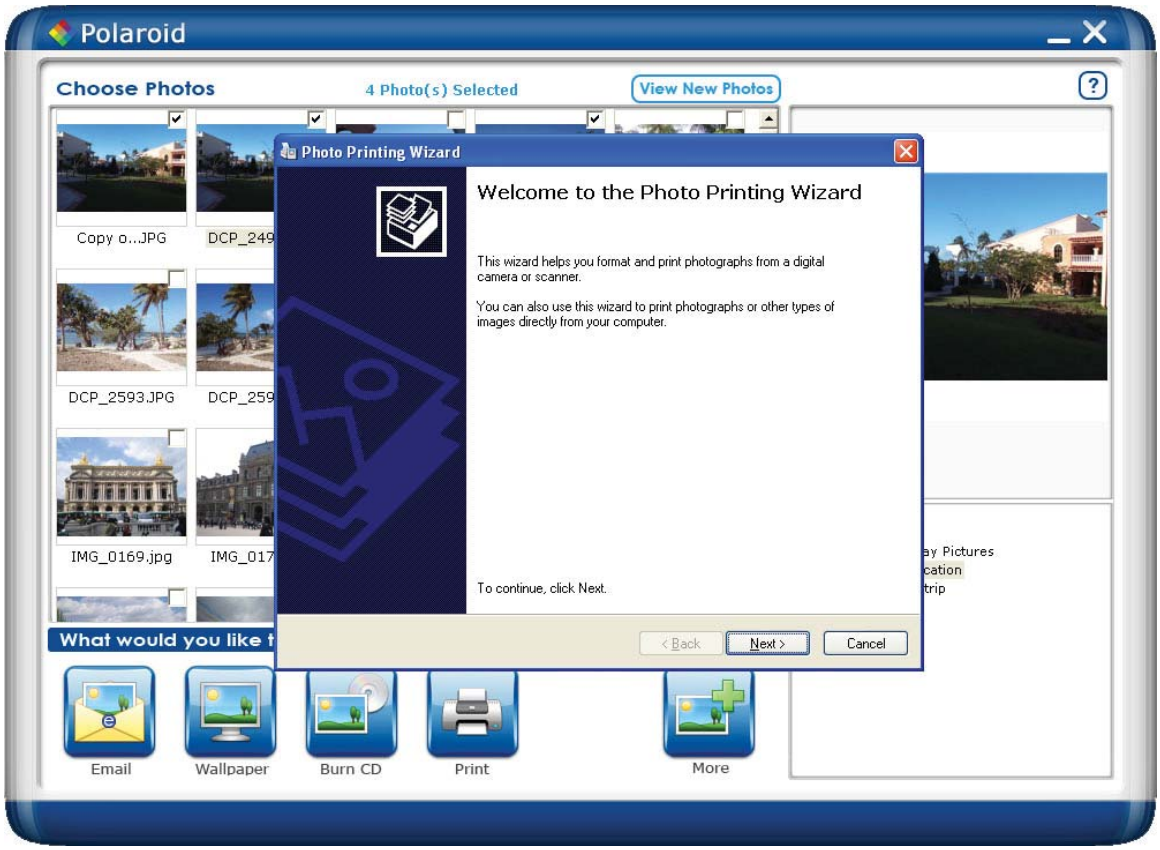

# Working with Your Photos

## *To attach your photos to an e-mail (for use with Microsoft Outlook and Outlook Express only):*

1. Connect PhotoKeeper™ to your computer and let the backup complete. If you have already backed up photos onto PhotoKeeper™, you should click on the **View Images** button on the **Countdown** page.
2. Select the photos you want to e-mail by clicking on the boxes next to each photo. If you wish to e-mail all your images in a folder, click on the **More** button, then click on **Select All Images.** Click the **Clear Selection** button to clear all of the selections on the current page.
3. Click on the **Email** button. PhotoKeeper™ will automatically open up a new e-mail with your Photos attached.

   **Note:** Some ISPs set limits on the maximum size of incoming and outgoing email attachments. Ensure the photos that you have selected do not exceed these values.

## *To set a photo as your desktop wallpaper:*

1. Connect PhotoKeeper™ to your computer and let the backup complete. If you have already backed up photos onto PhotoKeeper™, you should click on the **View Images** button on the **Countdown** page.
2. Select the photo you want to set as your desktop wallpaper. You may only select one photo.
3. Click on the **Wallpaper** button. This will set your selected photo as your desktop wallpaper.

## *To burn your photos to a CD:*

**Note:** This feature is only supported under Windows XP and Vista.

1. Connect PhotoKeeper™ to your computer and let the backup complete. If you have already backed up photos onto PhotoKeeper™, you should click on the **View Images** button on the **Countdown** page.
2. Select the photos you want to burn onto the CD by clicking on the boxes next to each photo. If you wish to burn onto the CD all your images in a folder, click on the **More** button, then click on **Select All Images.** Click the **Clear Selection** button to clear all of the selections on the current page.
3. Click on the **Burn CD** button. This will bring up the Windows **CD Writing Wizard**.
4. Follow the on-screen instructions to create your CD.

## *To delete photos from PhotoKeeper™:*

Deleting will allow you to remove backed up photos or directories (including their contents) from PhotoKeeper™. Deleting a photo or directory will remove it from PhotoKeeper™ but will not remove it from your computer. If you delete a photo or directory from PhotoKeeper™ without removing them from your computer, PhotoKeeper™ will back up the same files the next time you run the backup. To permanently remove a photo or directory, you must remove them from both PhotoKeeper™ and your computer.

To delete a photo from PhotoKeeper™:

1. Connect PhotoKeeper™ to your computer. If you have already backed up photos onto PhotoKeeper™, you should click on the **View Images** button on the **Countdown** page.
2. Move your mouse pointer over the photo's file name you wish to delete. Click the left-mouse button to select your photo. The selected file's name will be highlighted.
3. Click the right-mouse button and select **Delete file from PhotoKeeper™** option.
4. Click on the **OK** button in the confirmation window to delete your photo.

# Working with Your Photos

To delete a directory:

1. Connect PhotoKeeper™ to your computer. If you have already backed up photos onto PhotoKeeper™, you should click on the **View Images** button on the **Countdown** page.
2. If you have just completed a backup of your computer and new photos were found, click on the **View All Photos** button. This will show you all of the photos that you have backed up and add a directory tree in the bottom left corner for navigation.
3. Move your mouse pointer to the directory tree and place it over the directory you wish to delete. Click the left-mouse button to select your directory. The selected directory's name will be highlighted.
4. Click the right-mouse button and select the **Delete directory from PhotoKeeper™** option.
5. Click on the **OK** button in the confirmation window to delete your directory.

# Troubleshooting

| Problem | Solution |
|---|---|
| Nothing happens when PhotoKeeper™ is connected to computer. | • Ensure USB cable is properly connected<br>• Connect power adapter<br>• Connect PhotoKeeper™ to computer after computer has fully booted up (select a user, if required)<br>• Close full screen mode in Windows XP Media Center Edition. Disconnect and reconnect PhotoKeeper™.<br>• Disconnect PhotoKeeper™ and re-start your computer.<br>• Close or minimize Windows Media Player. Disconnect and reconnect the PhotoKeeper™.<br>• Run FixMyPhotoKeeper utility program:<br>1. Connect PhotoKeeper™ to your computer.<br>2. Click on the **Start** button on your computer. Click on the My Computer icon.<br>3. From the My Computer window, locate either the MB_System or MB_ Storage devices.<br>4. Right-click on either MB_System or MB_Storage and select Explore.<br>5. Double-click on the FixMyPhotoKeeper.exe program. Follow the on-screen instructions. |
| After connecting PhotoKeeper™, the following message appears: "Media backup cannot start because you do not have the required permissions. Please re-login into this computer with an Administrator-level account." | Log into computer with Administrator-level account |
| Some photos were missed during backup. | Check Backup options from the **Setup Options** link. For more information, see Backup Configuration Options in PhotoKeeper™ User's Manual. |
| PhotoKeeper™ beeps after it has been connected to computer. | Connect power adapter |
| PhotoKeeper™ doesn't automatically start when I connect it to my computer running Windows Vista. Instead, I get a window that appears called "AutoPlay". | In the AutoPlay window, select the **Always do this for software and games** checkbox. Click on **Run StarterPhotoKeeper.exe**. |

# Frequently Asked Questions

**The first time I backed up my computer it seemed to take a lot longer than the subsequent back ups. Are all of my photos still being backed up?**
Yes, this is normal. Each time PhotoKeeper™ backs up your computer, it only backs up photos that it does not already have a copy of. As a result, the first backup usually takes the longest and subsequent backups are usually much quicker.

**How many photos can PhotoKeeper™ store?**
The number of photos PhotoKeeper™ can store depends on the size of each of your photos:

| Camera type | Approximate number of photos PhotoKeeper™ can store*: |
|---|---|
| 2 MP | 46,210 |
| 3 MP | 35,105 |
| 4 MP | 29,317 |
| 5 MP | 23,094 |
| 6 MP | 18,505 |
| 8 MP | 12,331 |

*The approximate number of JPEG photos. Actual file size depends on camera, internal file size, compression settings, as well as selected resolution and compression mode settings. In addition, JPEG compression will result in different compression ratios based on photo complexity.

**I completed a back up of my photos but not all of my pictures were backed up.**
PhotoKeeper™ is designed to back up photos based on the folders they are saved in, their size and their file type (extension). Only photos which meet all of these criteria are backed up. Each of these criteria has default settings, but these settings can be changed by adjusting the backup options. For more information on changing the backup options, see the Backup Configuration Options section in the user's manual.

**When I connect PhotoKeeper™ to my computer, a balloon pops up with the message: "This USB device can perform faster if you connect it to a High-Speed USB 2.0 port". Is this a problem?**
No, your backup will continue to run normally and no action is required on your part. This message is merely indicating to you that you have connected PhotoKeeper™, a USB 2.0-complaint device, to a slower, USB 1.1 port on your computer.

# Recycling and Copyright Information

## Questions? Need some help?

Call our help line found on the insert with this icon:

Or visit www.polaroid.com.

**WEEE STATEMENT:**

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, go to **www.polaroid.com** and click on **"Company"** or call the customer service number for your country listed in the instruction manual.

"Polaroid" and "Polaroid and Pixel" and 'PhotoKeeper" are trademarks of Polaroid Corporation.
For service, support and warranty information, visit www.polaroid.com.